

## Beacon Installation

1. Brackets are provided to mount the beacons to the outside of the Mounting brackets.
2. The beacon is supplied with the Deutsch Connector already fitted. This will plug directly into the two connectors on the underside of the Arrow Board. (Fig. 1)
3. An additional wire is left loose behind the Deutsch connector, this will be the pattern change wire.
4. Programming the beacon may be different between beacon models, please refer to the beacon instructions, or contact OzLED for further information.
5. Once the Beacon has been programmed to the desired pattern, blunt cut this wire and then slip the loose piece of heat shrink over the wires and bring this down flush with the DT Connector.
6. Use a heat gun, or lighter to shrink the tube and seal the wiring.
7. Connect Beacon and continue with installation as per the installation guide.

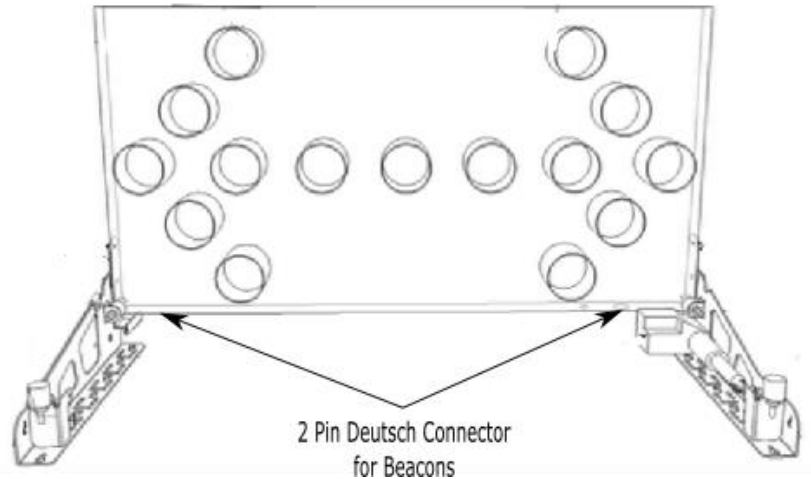


Figure 1